

CHECKING BRIDLES FOR STRETCH OR SHRINKAGE

WE RECOMMEND YOU REGULARLY CHECK YOUR KITES BRIDLES TO KEEP YOUR KITE FLYING AT TOP PERFORMANCE. USE THE MEASUREMENTS TO CHECK YOUR BRIDLE LENGTHS.

RECOMMENDATIONS


- Open your kite in a large space, big enough to spread your kite out fully.
- Use a tape measure to measure the bridles.
- Print out the sheet and write down any differences.

If your bridles are out by more than 20mm we recommend replacing them, please get in touch with the shop/dealer you purchased the kite from and they can order individual bridle lines or a full set if they do not already have stock.

BRIDLE CHECK SHEET. ALL MEASUREMENTS IN MM

	4m	5m	6m	7m	8m	9m	10m	12m
A1	760	885	970	1050	1110	1190	1250	1340
A2	330	390	430	460	490	520	540	580
A3	370	420	460	495	530	560	595	630
A4	590	670	750	800	860	910	980	1010
AL1	570	670	730	790	850	900	950	1020
AL2	430	500	540	590	620	670	710	760
KL	400	500	530	560	610	645	680	700

REO V4 - 4/5M RIGGING DIAGRAM

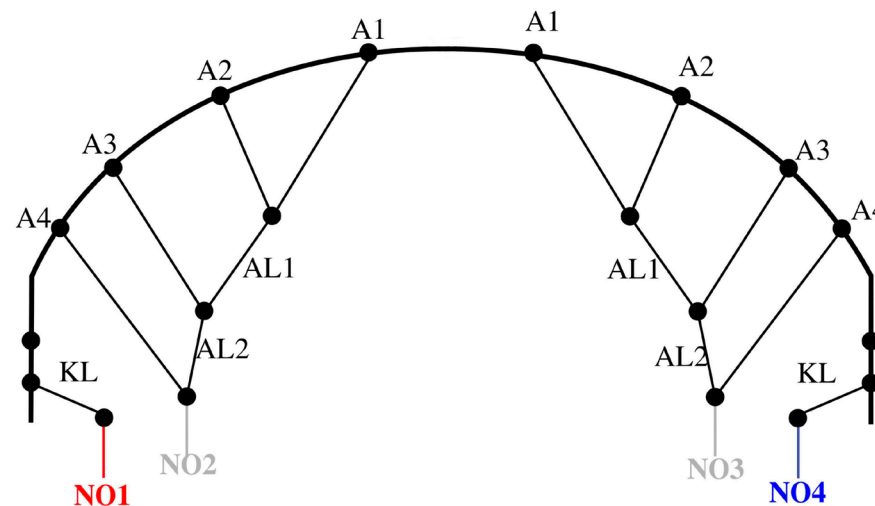

REO V4 - 7/8/9/10/12M RIGGING DIAGRAM

